


**SATIN CHROME SUSPENDED CABLE
WITH CEILING TO SIGN FIXINGS**

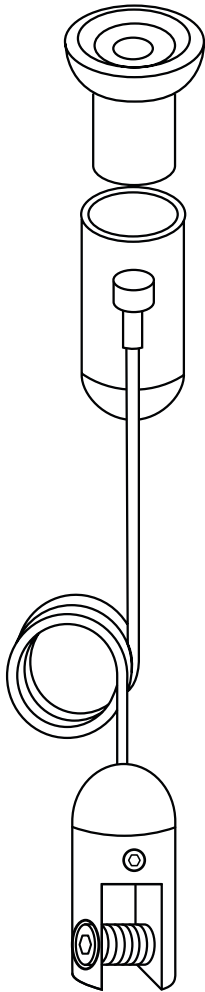

**Satin Chrome Suspended Cable With
Ceiling To Sign Fixings**

SATIN CHROME CABLE WITH CEILING TO SIGN FIXINGS



SUPPLIED:

2.5m steel cable with fixing plate and sign gripper
1x 1.5mm Allen key
1 x 3mm Allen key

You may need:

1 x screw per ceiling fixing
Rawl plugs
Drill for ceiling holes
Screwdriver
Wire cutters (if you need to shorten the cables)

INSTALLING CABLES

Mark out your required ceiling position and drill a hole for your fixing screw.

Unscrew the fixing plate from the ceiling fixing and securely screw it into the ceiling where you made the mark.

You can then screw the ceiling fixing back into the fixing plate and hang the cable down, allowing it to unwind.

Attach your poster holders to the cables, using the satin anodised grippers. Tighten the gripper to the cable using the smaller of the two supplied Allen keys, and tighten the gripper to the poster holder using the larger Allen key.

If you need to shorten the cables, simply pull them down through the gripper further, cut with wire cutters, and adjust the grub screw with an Allen key to create the correct tension.

Remember, the cable is only as strong as your ceiling fixing.